

COMPANION

OWNERS MANUAL

PORTABLE OUTDOOR GAS OVEN & COOKTOP

Part No. CS-01



Distributed in
New Zealand
by Gladiator Sports Ltd*



THIS IS A PORTABLE
APPLIANCE ONLY
OUTDOOR USE ONLY

AUSTRALIA'S ORIGINAL OUTDOOR BRAND

IMPORTANT: Read these instructions for use carefully. Familiarise yourself with the appliance before connecting it to a gas container. Keep these instructions for future reference.

GENERAL WARNINGS

- This appliance shall only be connected to a POL cylinder certified to AS2469 standards. This appliance is designed for outdoor use only and must be operated away from any flammable material or surfaces and materials.
- This appliance is to be stored in a dry and well ventilated location free from direct sunlight. Do not store when still connected to the cylinder. Make sure that the cylinder is disconnected and is stored in a well ventilated area, free from direct sunlight, heat and ignition sources. If being stored indoors, ensure that the location complies with the standard AS/NZS1596.
- This appliance must only be serviced by an authorised service agent, return to your place of purchase for service and repair.

DANGER!

- Ensure all packaging is removed prior to first use.
- During operation all surfaces will be extremely hot and should not be touched or handled.
- Do not use the appliance if it is leaking, damaged or does not operate properly.
- Handle with care even after brief use, always pick up using the handle not the cylinder.
- It may be hazardous to attempt to fit other types of gas containers or cartridges.
- Use only in well ventilated areas.
- Always operate appliance a minimum of 1000mm from flammable materials, walls and ceiling.
- Only use the hose assembly as supplied with this appliance for connection to the cylinder.
- Maximum length: 1000mm.
- Avoid twisting or kinking the flexible hose.
- Do not use adaptors. Do not modify appliance to fit other connectors or cylinders.
- Do not use multiple appliances to heat a single utensil.
- Children must be supervised by an adult at all times.
- Never leave appliance unattended when operating.
- Use as a cooking appliance only, is not to be used as heater or modify for any other reason.
- Avoid boil over and spills on to burners.



CARBON MONOXIDE HAZARD

Using this appliance in an enclosed space may cause DEATH.
Do not use in caravans, tents, marine craft, cars, mobile homes or similar locations.

IMPORTANT

- Use outdoors only.
- Keep children away at all times.
- Caution: Accessible parts may be very hot. Please take care when handling or moving the appliance.
- Appliance is to be used on a stable, level, flat non-flammable surface, the appliance should be protected from direct drafts and in a well ventilated place.
- Only cooking vessels with a maximum diameter of 220mm are to be used with this appliance.
- Take care that the primary air intakes, located on the burner tube of this appliance are not obstructed, or that air flow is restricted by placing items or other appliances close to or adjacent to the inlets.
- If you smell gas immediately turn the gas off at the cylinder and move the appliance and cylinder to a well ventilated area outside, keeping well away from sources of heat such as naked flames and pilot lights.
- Do not attempt to move or relocate the appliance when it is operating, extinguish the burner and allow to cool, disengage the gas cylinder then move the appliance.

 
 
CHECKING FOR GAS LEAKS

- Check that all connections are tight and that the gas cylinder connection has been tightened before you turn the cylinder gas valve on.
- **NEVER** check for leaks with a flame or pilot light.
- Using Companion Gas Leak Detection Spray or soapy water, coat all connections, if bubbles appear turn the cylinder gas control off and retighten the connection before re-testing.
- Inspect the appliance regularly for signs of wear, leaks or incorrect operation. If symptoms such as flaring of the burner, issues with lighting, damages to hoses or connections or leaks from seals or gas controls are identified do not attempt to repair, return to your authorised stockist for service and maintenance.





SAFETY INSTRUCTIONS

This appliance shall only be used in an above ground open air situation with natural ventilation, without stagnant areas, where gas leakage and products of combustion are rapidly dispersed by wind and natural convection.

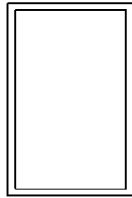
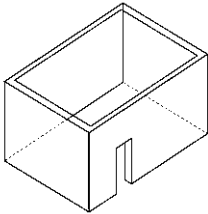


Any enclosure in which the appliance is used shall comply with one of the following:

  (A) An enclosure with walls on all sides, but with no overhead cover.

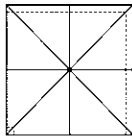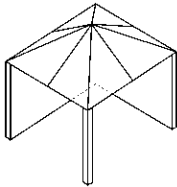

  (B) Within a partial enclosure that includes an overhead cover and no more than two walls.



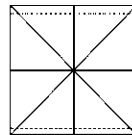
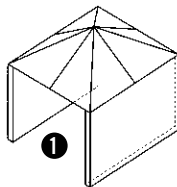


(C) Within a partial enclosure that includes an overhead cover and more than two walls, the following shall apply:

(1) At least 25% of the total wall area is completely open.

(2) 30% or more in total of the remaining wall side, back and front wall areas is open and unrestricted.

    (3) In the case of balconies, 20% or more of the total wall area shall remain open and unrestricted.

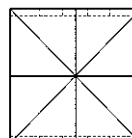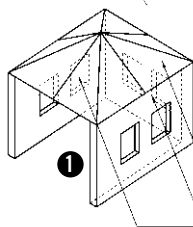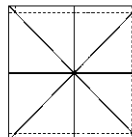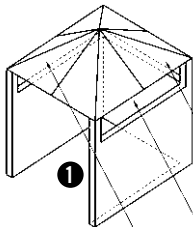

OWNERS MANUAL

UNDERSTANDING YOUR APPLIANCE



HANDLE ATTACHMENT

Install side handles as shown.



Install door handle as shown.





CONNECTION

Your appliance is designed to connect directly on to a POL gas cylinder using the specially designed LP Gas hose and regulator supplied with the appliance.

- Step 1.** Check that the Control Knobs are in the “Off” position (turned fully clockwise).
- Step 2.** Take the stove connector head of the hose and attach to the gas inlet on the appliance, tighten using a spanner.
- Step 3.** Attach the other end of the hose to the gas cylinder and tighten.
- Step 4.** Turn the cylinder gas valve on in an anti-clockwise direction for one full turn and then check the connections for leaks with Companion Gas Leak Detection Spray or soapy water. If a leak is detected turn the cylinder gas valve “Off” and retighten all connections, then retest.





LIGHTING THE STOVE

Make sure the Control Knob is set to the “OFF” position.

- Step 1.** Depress and turn the Control Knob anti-clockwise until a “click” sound is heard, check that the burner is now alight if so hold the ignition knob in for 10 to 15 seconds then release.
- Step 2.** If burner is not alight, return the Control Knob back to the “OFF” position, allow the excess gas to disperse then repeat ignition process.



ADJUSTING FLAME

Turn the gas control in an anti-clockwise direction to achieve a higher flame and in the clockwise direction for a lower flame or fully clockwise to turn the appliance “OFF”.



LIGHTING BURNER - OVEN

Make sure the Control Knob is set to the "OFF" position.

- Step 1.** Open oven door.
- Step 2.** Make sure the Control Knob is set to the "OFF" position.
- Step 3.** Depress and turn the Control Knob anti-clockwise until a "click" sound is heard, check that the burner is now alight.
- Step 4.** If the burner does not light, turn the Control Knob to the "OFF" position and wait for 5 minutes before attempting to relight the burner.



ADJUSTING TEMPERATURE

- Step 1.** Turn the Control Knob in an anti-clockwise direction to achieve a higher temperature and in a clockwise direction for a lower temperature or fully clockwise to turn the appliance "OFF".
- Step 2.** The oven temperature is displayed on the gauge located on the control panel.

Note: If oven temperature is above the desired cooking level, slightly open the door to remove excess heat.



HANDLING DURING OPERATION

During operation the door handle may become HOT - Ensure that you use an Oven Mit or similar when touching the handle



TURNING THE APPLIANCE OFF

If the appliance is no longer to be used and to reduce the risk of blocked gas jets caused by excess gas being left in the hose, all remaining gas must be expelled from the hose assembly.

- Step 1.** With the flame still operating, turn the valve on the gas cylinder in a clockwise direction until it is "Off". Allow the flame to burn down then extinguish once all remaining gas in the hose has been used.
- Step 2.** Turn the gas controls on the appliance clockwise to the "Off" position.

CARE INSTRUCTIONS

Using warm soapy water with a mild detergent (do not use bleach) wipe down all surfaces and areas of the appliance, taking care not to allow water to enter the burner outlets or aeration holes located in the burner tube.

DO NOT submerge the appliance in a sink or bowl.

DO NOT use abrasive cleaners or bleach.

MAINTENANCE AND SERVICE

During operation if it is noted that the burner flame is unstable, is changing colour from blue to yellow or has a distinct smell it is important that you take the appliance to your local authorised gas appliance repairer for inspection. Periodically check the gas control is tight and has no leaks, follow the testing for leaks procedure. Check the gas hose and regulator for any signs of wear, cuts or fraying, if identified replace immediately with a Gas Certified replacement hose and/ or regulator.

For further information or assistance please contact customer service.

TECHNICAL DETAILS AND SPARE PARTS

SPECIFICATIONS	
Part No.	CS-01
Description	Portable gas oven & cooktop
Dimensions	540L x 391W x 458Hmm
Weight	15kg

GAS JET	
Burner	0.675mm
Oven	0.575mm

CONSUMPTION	
Inlet Pressure	2.75kPa
Burner	5.6Mj/hr
	111.1g/hr
Oven	3.8Mj/hr
	75.4g/hr

A selection of spare parts and components are available for your appliance to ensure years of operation. For more information call 1300 555 197
Email: service@companionbrands.com.au

Distributed by
Companion Brands
Bundoora Victoria 3083
www.companionbrands.com.au