

Installing YOUR VENTED DOOR ADJUSTER

1. Remove large black nut from middle of the inside of the door (no longer needed).
2. Place angled spacer (C) on tongue of vent adjuster insert (B).
3. Ensure cutaway section of vent insert is positioned as shown to clear door hinge.
4. From behind, place vent adjuster insert (B) in centre of door.
5. Place door cap (E) over front opening of door (D), ensuring that adjuster tongue goes through slot.
6. From behind, insert Phillips head screws (A) through holes in vent adjuster insert (B), and door cap (E).
7. By hand, fit two nuts (F) to screw threads poking out of door cap.
8. Holding nuts with either a socket or adjustable wrench, use screwdriver to tighten screws at rear of door.
9. Ensure correct operation of vented door adjuster.

