



STEP 1: CHOOSE AREA & CHECK COMPONENTS

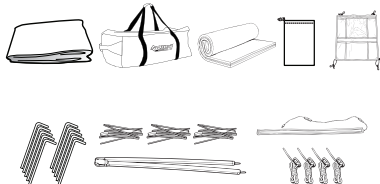


- Find a suitable area free of rocks, sticks and trees to set up the swag
- Lay out all components and ensure everything is there

STEP 2: UNROLL SWAG

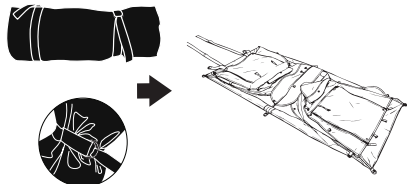


- Release the two compression straps that are keeping the swag rolled up
- Lay the swag material out

STEP 3: ASSEMBLE THE SWAG FRAME

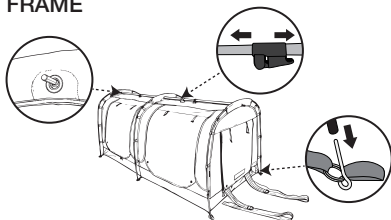

- Assemble the three body poles and ridge pole then join each section together
- Gently slide the body poles through the sleeves then insert into the ring and pin
- Gently slide the ridge pole underneath the middle sleeve and insert into one eyelet. Extend the pole and insert into the other eyelet, then lock the clamp into place

STEP 4: ATTACH CANVAS ONTO THE FRAME

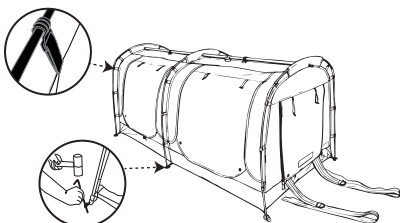

- Attach the canvas to the poles with the plastic clips starting from the top and work your way down
- Secure the swag to the ground using the included pegs. The windows can be secured with the included ropes and pegs to enable ventilation in bad weather

STEP 5: FINISH ASSEMBLY AND SECURE TO GROUND



- Lay mattress out inside, allowing for a few hours for the foam to fully expand
- Attach the LED strip light onto the hook and loop strip. Plug the USB-A connection into a 5V power source such as a power bank (not included)
- Attach the 6 panel storage system with the plastic clips on all corners

PACK UP

- To take down the swag, reverse the previous

CHANGING WEATHER CONDITIONS

- In light wind and rainy conditions, windows and doors must be closed to ensure no water gets in, peg points must be checked to ensure the swag is secured properly.
- In weather conditions get worse, the swag may need to be stored in better cover or packed away to avoid any damage or injury.



OZtrail® advises to assemble your swag before use to ensure all parts are present and to become familiar with the assembly of your swag. Choose a flat level area with no objects that could damage the swag.

HELPFUL HINT: Be careful not to twist or force the frame assembly when setting it up. It is not necessary at any stage of assembly to apply more than a small force on the frame. If a small force is not sufficient to carry out each described step, then realign the frame and try again.

IMPORTANT

Thank you for purchasing a quality OZtrail® product, if you have any questions your OZtrail® stockist will be happy to help you or contact our customer service team on email info@adventureoperations.com

- This product is designed as a portable and temporary shelter and is not for permanent use.
- Avoid continuous exposure to sunlight as this will eventually cause the material to weaken, fading is an early warning sign of this process.
- Before storing the swag ensure it is clean and completely dry. Never store a damp or wet swag.
- Always use terrain appropriate pegs, there may be cases where you need to purchase additional pegs that are more suitable for your camp set up.
- This swag is designed to be used for recreational use only. It is not designed for commercial use. If this swag is used commercially, this voids any warranty.

SAFETY

TO PREVENT INJURY CAUSED BY GAS POISONING OR SUFFOCATION

- Do not use fuel burning, oxygen consuming devices inside the swag. This includes candles, gas lanterns, kerosene lamps, stoves, cooking and heating appliances.
- Do not use gas appliances of any kind inside the swag.

TO PREVENT INJURY CAUSED BY FIRE



- The fabric may burn if it comes into contact with a flame source.
- Do not pitch the swag near a camp fire or any other flame source.
- Do not use candles, matches or any other flame source in or near the swag (this includes stoves, cooking equipment, lighting and heating appliances).
- Only use recommended water repellent compounds on the swag.
- Do not spray swag fabrics with insecticides.

TO PREVENT INJURY CAUSED BY ELECTRICITY



- Always exercise care when using electricity and electric lighting in and near the swag.
- Only use 12 volt lighting.

TO PREVENT INJURY CAUSED BY YOUR CAMPING ENVIRONMENT



- Do not pitch your swag on an area that could get flooded



- Do not pitch your swag near cliffs in case of collapse or rock fall



- Do not leave your swag erected in strong winds - collapse the swag onto the ground and seek refuge in your vehicle



- Do not pitch your swag under trees with dead branches or under trees known to drop branches refuge in your vehicle

CARE INSTRUCTIONS: Wipe down all metal surfaces with fresh water after use. To remove marks, use a soft brush or sponge with fresh water and mild detergent only and rinse with fresh clean water. Allow to dry thoroughly. Never pack away damp, dirty or wet. After beach use or wet conditions treat all zips and metal components with silicon spray.

MATERIALS

FABRIC: Polycotton canvas, polyester and PVC

FRAME: Metal with plastic fittings

OZtrail® is a registered trademark of
Adventure Trading Australia Pty Ltd

Designed by:
Adventure Trading Australia Pty Ltd
71 Charles Ulm Place,
Eagle Farm, QLD 4009
AUSTRALIA

Made in China



WARRANTY - For details see www.oztrail.com.au/warranty

