



# OWNERS MANUAL

## FAST FRAME 3.2M X 3M SCREENHOUSE

### BEFORE YOU BEGIN

This tent requires a minimum of two people to set up.  
Read all the instructions before setting up your tent.  
Check parts list to ensure you have full contents.  
Find a flat area for your tent, free from rocks, potholes and branches.  
Ensure that you use all pegs and ropes as instructed.  
If conditions are windy, arrange tent as to have narrowest side of tent facing into the wind.  
Keep away from open flames, DO NOT USE stoves or burning appliances inside the tent.

### STORAGE

To maximise the life of your tent, always ensure it is clean of dirt and debris.  
Never store if wet or damp. Consider airing your tent at home after your trip and allow to completely dry before storing between trips.  
Continued exposure to sunlight can degrade the polyesters used to make tents. Always store your tent in its storage bag, away from direct light in a cool, dry space.




### CONTENTS

Screenhouse x 1	Peg bag x 1
Pegs x 14	Pole bag x 1
Awning poles x 2	Carry bag x 1
Guy ropes x 2	

# OWNERS MANUAL


## FAST FRAME 3.2M X 3M SCREENHOUSE

### STEP 1: LAYOUT THE SCREENHOUSE

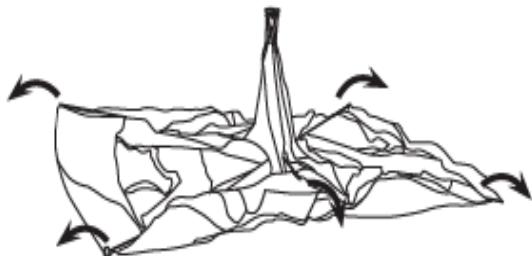

- Unfold the screenhouse and outstretch over a flat, clear area
- Arrange the door so it is facing your desired area for entry & exit
- **Ensure the doors are zipped open when setting up**

### STEP 2: ERECT THE SCREENHOUSE FRAME

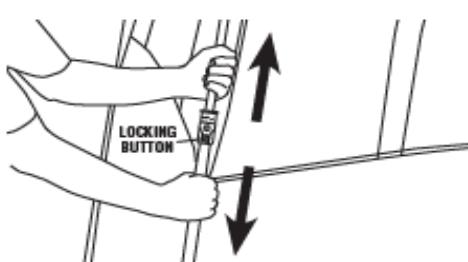

- Locate the lower leg section of the frame
- Raise to near vertical orientation
- Extend the leg section until the locking button clicks into the locked position
- Repeat on other legs

### STEP 3: ALWAYS PEG OUT AND USE GUY ROPES



- Ensure the screenhouse is pegged down and guy ropes must be set out


### STEP 4: ASSEMBLE THE AWNING



- Use awning poles and additional ropes to set up awning
- Repeat this step on other side with additional poles (sold separately)

### STEP 5: CLIP IN 3 WAY ZIPPER LOCK

Close      Open

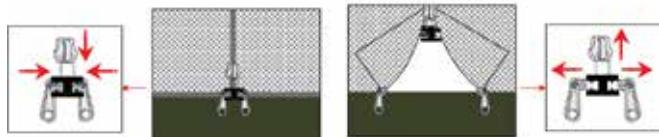

- Secure the three zippers together by clipping them into the 3 way zipper lock

### STEP 6: TO TAKE DOWN THE TENT, REVERSE THE PREVIOUS STEPS

SPARE PARTS AND ASSISTANCE - For details see [www.oztrail.com.au](http://www.oztrail.com.au)  
 WARRANTY - For details see [www.oztrail.com.au/warranty](http://www.oztrail.com.au/warranty)

OZtrail® is a registered trademark of  
**Adventure Trading Australia Pty Ltd**

Designed by:  
**Adventure Trading Australia Pty Ltd**  
 71 Charles Ulm Place,  
 Eagle Farm, QLD 4009  
 AUSTRALIA

Made in Bangladesh

