



TRUSTED SINCE 1941

AEROBREEZE ProMist FAN 25CM FAN



INSTRUCTION MANUAL

Model No. 10001918

IMPORTANT

 
- Please read this instruction manual carefully before operating the unit.
- To maximise battery life, it is recommended to fully charge the battery every three months.

SAFETY INFORMATION

- This unit is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge.
- Children must be supervised at all times when around this unit.
- Place unit in a well ventilated area when in use or recharging the battery.
- Do not attempt to disassemble or replace the batteries.
- To be repaired by qualified persons only - contact Customer Service on 1300 362 921.
- Do not expose to heat source, rain or submerge in liquid.
- If charging cords become damaged, they must be replaced by a qualified person.
- Do not damage the USB cable, forcefully bend it, pull it, twist it, or use it if frayed or broken.
- Do not use the USB cable or plug if dust has collected or the Type-C connection is loose.
- Do not use with anything other than the dedicated USB cable.
- Do not use near fire or in high-temperature areas.
- If the unit is damaged, stop use immediately and contact Customer Service on 1300 362 921.
- Ensure the USB cable connector is fully inserted and not loose.
- Use only the included USB cable for charging.
- This product is for household use only. Do not use for commercial purposes.
- Do not use in places where it may come in contact with rain.
- Do not use if the product is cracked, deformed, or damaged.
- Do not bring face or hair close to the fan outlet or air intake.
- Do not use near materials that easily get sucked in (e.g. curtains, thin cloth, etc).
- Do not drop or subject the unit to strong impact.
- When unplugging the USB cable, always hold the connector - do not pull on the cord.
- Use and store the product in a location with temperature between -10°C and 40°C.

 
UNDERSTANDING THE APPLIANCE

ProMist FAN

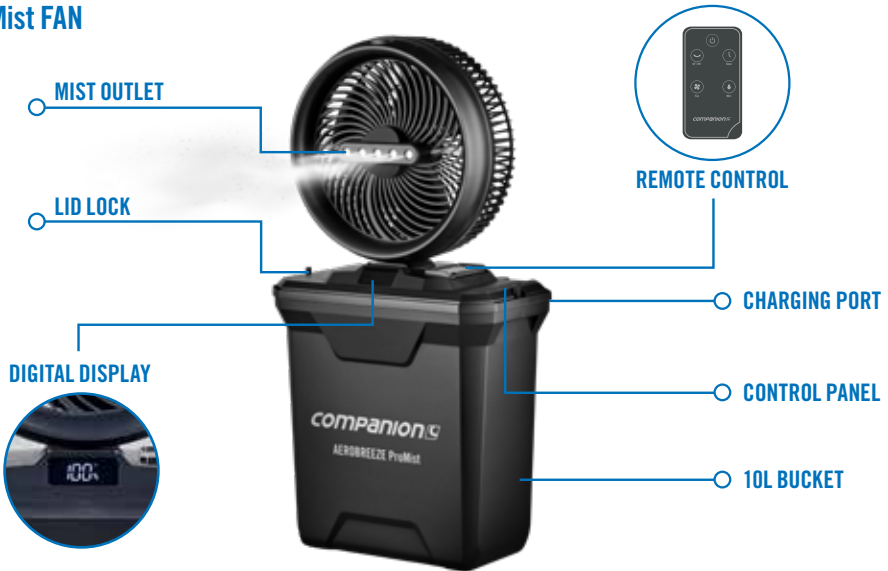



REMOTE CONTROL

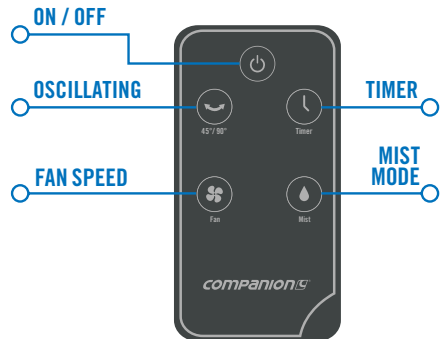- Step 1.** Remove the plastic pull tab from the remote control before use.
- Step 2.** The remote control range is less than 3 metres.
- Step 3.** Ensure that the transmitting signal of the remote control is aimed at the receiver.



WARNING: The remote control contains a CR2025 button battery.



 <h2 style="margin: 0;">WARNING</h2> <p>KEEP OUT OF REACH OF CHILDREN SWALLOWING CAN LEAD TO CHEMICAL BURNS, PERFORATION OF SOFT TISSUE AND DEATH. SEVERE BURNS CAN OCCUR WITHIN 2 HOURS OF INGESTION. SEEK MEDICAL ATTENTION IMMEDIATELY.</p>	
---	---






TO CHARGE

- Step 1.** Connect the USB cable (included) to the fan’s Type-C port, and the other end to a USB port on an AC adapter (not included) or a power source.
- Step 2.** A green lightning bolt will flash on the digital screen while charging.
- Step 3.** Once completely charged, the display will show 100% and the green lightning bolt will always be on.



OPERATION

The fan can be operated with and without the remote control. The below steps apply to both operation methods.

FUNCTION		OPERATION
	Fan Button	Press F1-F4 to cycle through fan speeds. Press again to turn off. Digital display shows the battery level. Fan can be used without the misting function.
	Mist Button	Press P1 (1 misting jet), P2 (3 misting jets), P3 (5 misting jets), press again to turn off mist.
	Timer Button	Press 1H, 2H, 4H, 8H or 0H (no timer set). Timer can only be set while in operation. Once turned off, the fan will revert to no timer.
	Oscillation Button	45°/90° oscillation. Returns to starting position once the fan is turned off. Oscillation only operates when fan and misting functions are on.
	Power Button	Press and hold the power button for 2 seconds to turn all functions off.

FILLING THE WATER TANK

Step 1. To unlock the Lid Locks on both sides of the unit, align both locks so they are parallel to the fan (Fig 1).

Step 2. Remove the fan lid.

Step 3. Fill the reservoir with fresh clean water. DO NOT add any aromatic oils, etc.

Step 4. Replace the fan lid.

Step 5. Lock the Lid Locks on both sides of the unit, align both locks so they are vertical to the fan (Fig 2).

Step 6. To empty the reservoir, reverse the above steps. To remove remaining water from the hose, turn the misting function on for 10 seconds. Ensure that the fan and reservoir are completely dry before storing.



Fig 1

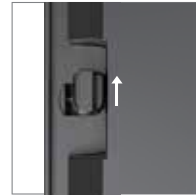 


Fig 2

TIPS

Only use clean fresh water. DO NOT add impurities, essential oils, perfumes or other liquids as they may clog the misting jets.

CLEANING INSTRUCTIONS

Step 1. Ensure unit is switched off and disconnected from a power source before cleaning.

Step 2. Clean with a damp cloth only.

Step 3. DO NOT use any abrasive cleaners or harsh chemicals.

Step 4. Ensure all components are completely dry before storing the unit.

MAINTENANCE

For further information or assistance please contact customer service on 1300 362 921 or email: info@adventureoperations.com

TROUBLESHOOTING



ISSUE	CAUSE	SOLUTION
Fan does not turn on	Battery is low or not charged	Charge the unit with the included USB cable
Blades are spinning, but no wind	Dust or debris has accumulated around the fan or motor	Clean the fan thoroughly
Fan / misting stops during use	Battery is drained	Recharge the battery fully before reuse
Misting jets are not working	Misting jets are blocked	Clean the misting jets thoroughly
Fan speed dropped to Level 3 unexpectedly	Battery is below 10%	When the battery is below 10%, fan is on high and spray is at max, the fan will drop to Level 3 and misting will remain. Charge battery to increase fan speed
Unusual noise during operation	Debris is caught in the fan	Turn off the unit and remove the debris safely
Remote control is not working within 3 metres of fan	Remote control battery is flat	Replace the battery (Battery type: CR2025)
Remote control is not working	Remote control is further than 3 metres from the fan	Move closer to the fan

SPECIFICATIONS

Part No.	10001918
Fan Size	25cm
Dimensions	31.5L x 18W x 61H cm
Packed Dimensions	31.5L x 18W x 33H cm
Water Tank Capacity	10L
Weight	2.3kg
Fan / Oscillating Runtime	30hrs (Low F1) / 20hrs (Medium F2) / 12hrs (High F3) / 9hrs (Max F4)
Fan / Misting Runtime	14hrs (Low F1) / 7.5hrs (Medium F2) / 5hrs (High F3) / 4.5hrs (Max F4)
Fan Timer	1hr / 2hr / 4hr / 8hr
Mist Settings	Low (P1 - 1 jet) / Medium (P2 - 3 jets) / High (P3 - 5 jets)
Misting Output	0.2 to 1.4L per hour
Battery	20000mAh lithium battery
Remote Control Battery	CR2025 button battery
Input	5V 3A
Charge Time	9 hours
Material	ABS plastic
Water Rating	IPX4
Operating Temperature	-10° C to 40° C
Pack Contents	1 x Aerobreeze ProMist Fan 1 x Remote Control 1 x USB charging cable 1 x Instruction Manual

WARNING: The remote control contains a CR2025 button battery.



 WARNING	
KEEP OUT OF REACH OF CHILDREN SWALLOWING CAN LEAD TO CHEMICAL BURNS, PERFORATION OF SOFT TISSUE AND DEATH. SEVERE BURNS CAN OCCUR WITHIN 2 HOURS OF INGESTION. SEEK MEDICAL ATTENTION IMMEDIATELY.	



IMMEDIATELY SEEK MEDICAL ATTENTION

If it is suspected a button/coin battery has been swallowed or otherwise placed inside any part of the body, a person should contact the Australian Poisons Information Centre on 13 11 26 immediately for 24/7 fast, expert advice.

WARRANTY POLICY

1. Products distributed by Adventure Operations Australia Pty Ltd and any of our subsidiaries come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if products fail to be of acceptable quality and the failure does not amount to a major failure.
2. In addition, we warrant that this product will be free from defects in materials and workmanship under normal use as described in the published product documentation for **1 year** from the date of original purchase (Limited Warranty). This Limited Warranty is only valid and enforceable in Australia and will apply only if you have purchased the product from us or our authorised resellers.
3. To the extent permitted by the Australian Consumer Law and any applicable local law:
 - (a) our obligations under this Limited Warranty are limited to the repair, replacement or refund of covered parts that prove defective under normal use during the Limited Warranty and does not extend to any claim for damages that you or any other person may have for any loss (including without limitation consequential damages or loss of profit, freight/shipping or travel costs), or damage howsoever caused whether or not such loss or damage arises as a result of any defect in the product or from the failure or omission on our part to comply with any obligation at law;
 - (b) in replacing a defective product under the Limited Warranty, we may, at its discretion, substitute a model of equivalent nature where the exact model is unavailable;
 - (c) this Limited Warranty does not apply to damage caused by failure and damage caused by improper use and abuse, fair wear and tear, accidents, misuse (including failure to follow instructions regarding care and maintenance of the product), neglect, disassembly, alterations or external causes such as, but not limited to, water damage, exposure to sharp objects, exposure to excessive force, anomalies in the electrical current supplied to the product (if applicable), and extreme thermal or environmental conditions;
 - (d) we may elect, at our discretion and as an alternative to repairing or replacing a defective part to refund the cost of the relevant product upon it being returned to us; and
 - (e) this Limited Warranty does not extend to any products acquired for the purposes of re-supply, or for use in a manufacturing, or repair processes.
4. This warranty may be claimed by:
 - returning the product to its place of purchase, with a detailed proof-of-purchase clearly showing the date and detail of the purchase;
5. If you have any questions concerning this warranty policy, you may contact us in writing:
 Adventure Operations, 71 Charles Ulm Place, Eagle Farm, 4009 QLD, or by email:
warranty@adventureoperations.com or visit our website: www.adventureoperations.com

TO THE EXTENT PERMITTED BY LAW, ADVENTURE OPERATIONS AUSTRALIA PTY LTD, ITS SUBSIDIARIES AND ITS VENDORS DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR ANY SIMILAR STANDARD IMPOSED BY APPLICABLE LEGISLATION AND ADVENTURE OPERATIONS AUSTRALIA PTY LTD AND ITS SUBSIDIARIES' RESPONSIBILITY TO REPAIR, REPLACE, OR OFFER A REFUND FOR DEFECTIVE PRODUCTS IS THE SOLE AND EXCLUSIVE REMEDY PROVIDED TO ITS CUSTOMERS UNDER THIS DOCUMENT.

NOTE:

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

WARRANTY - For details see www.companionoutdoor.com/warranty

Companion® is a registered trademark of
Adventure Trading Australia Pty Ltd

Designed by:
Adventure Trading Australia Pty Ltd
71 Charles Ulm Place,
Eagle Farm, QLD 4009
AUSTRALIA



Made in China