


OWNERS MANUAL **MITCHELL DOG DEN**

 
10002002

STEP 1: CHOOSE AREA & CHECK COMPONENTS

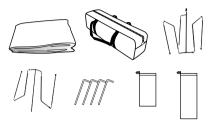

- Find a suitable area free of rocks, sticks and trees to set up the swag
- · Lay out all components and ensure everything is there

STEP 2: UNROLL SWAG



- Release the two compression straps that are keeping the swag rolled up
- · Lay the swag material out

STEP 3: ASSEMBLE THE SWAG FRAME



- · Assemble the two frame sections and join together
- Insert the poles into the spigots found on the ring and pins in each corner

STEP 4: ATTACH CANVAS ONTO THE FRAME



Attach the canvas swag onto the frame with the plastic clips

STEP 5: FINISH ASSEMBLY AND SECURE TO GROUND



- Extend the adjustable middle pole out to tension the canvas. The webbing clip on the roof should line up with the horizontal metal pole, if it doesn't please adjust so the material is tensioned correctly If you over extend then you could cause damage to the swag
- Secure the swag to the ground using the included pegs

PACK UP

· To take down the swag, reverse the previous steps.

CHANGING WEATHER CONDITIONS

- In light wind and rainy conditions, windows and doors must be closed to ensure no water gets in, peg points must be checked to ensure the swag is secured properly.
- In weather conditions get worse, the swag may need to be stored in better cover or packed away to avoid any damage or injury.