

COMPANION

TRUSTED SINCE 1941



PORTABLE GAS OVEN & COOKTOP

14,200 BTU



OUTDOOR USE ONLY

OWNERS MANUAL

Part No. CS-01



IMPORTANT: Read these instructions for use carefully. Familiarise yourself with the appliance before connecting it to its gas container. Keep these instructions for future reference.

GENERAL WARNINGS

- This appliance shall only be used with a ULPG refillable gas cylinder certified to AS 2469.
- IT MAY BE HAZARDOUS TO ATTEMPT TO FIT OTHER TYPES OF GAS CONTAINERS.
- ONLY USE IN WELL-VENTILATED AREAS.
- CARBON MONOXIDE HAZARD - USING THIS APPLIANCE IN AN ENCLOSED SPACE MAY CAUSE DEATH. DO NOT USE IN CARAVANS, TENTS, MARINE CRAFT, CARS, MOBILE HOMES OR SIMILAR LOCATIONS.
- CAUTION: accessible parts may be very hot. Keep young children away.
- USE OUTDOORS ONLY.

SAFETY INFORMATION

- Inspect the appliance regularly for signs of wear, leaks or incorrect operation. If symptoms such as flaring of the burner, issues with lighting, damages to hoses or connections or leaks from seals or gas controls are identified do not attempt to repair, return to your authorised stockist for service and maintenance.
- Do not modify this appliance.
- Check that seals between the appliance and the gas container are in place and in good condition before connecting the gas container. See figure 1.
- Do not use this appliance if it has damaged or worn seals.
- Do not use the appliance if it is leaking, damaged or does not operate properly.
- This appliance is to be operated on a stable, horizontal, non-flammable surface.
- The appliance should be protected from direct drafts and in a well ventilated place.
- Gas orifices and burner must be kept clear of dirt and cobwebs. Flow of combustion and ventilation air through the perforated portions of the appliance must not be obstructed.
- Any cleaning agent used on the appliance must be of a non-combustible and non-corrosive nature.
- Gas containers shall be changed in a well-ventilated location, preferably outside, away from people and any source of ignition, such as naked flames, pilot flame, electric heaters/equipment.



CARBON MONOXIDE HAZARD

Using this appliance in an enclosed space may cause DEATH. Do not use in caravans, tents, marine craft, cars, mobile homes or similar locations.

- Only use the hose assembly supplied with this appliance for connection to the cylinder - DO NOT USE ADAPTORS.
- Do not use hoses with a length greater than 1m.
- Return to your place of purchase for spare parts, service and repair.
- This appliance must only be serviced by an authorised person.
- This appliance must be operated away from any flammable material or surfaces and materials.
- Always operate appliance a minimum of 1m from flammable materials, walls and ceiling.
- Ensure all packaging is removed prior to use.
- Do not operate this appliance before reading the instruction booklet.
- Do not place articles on or against this appliance.
- Do not store chemicals or flammable materials, or spray aerosols near this appliance.
- Do not operate with panels, covers or guards removed from this appliance.
- Do not operate in an enclosed area without ventilation.
- Do not operate in a boat, caravan or tent.


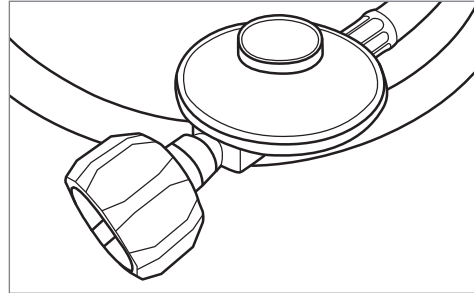 


Figure 1:

 

UNDERSTANDING YOUR APPLIANCE



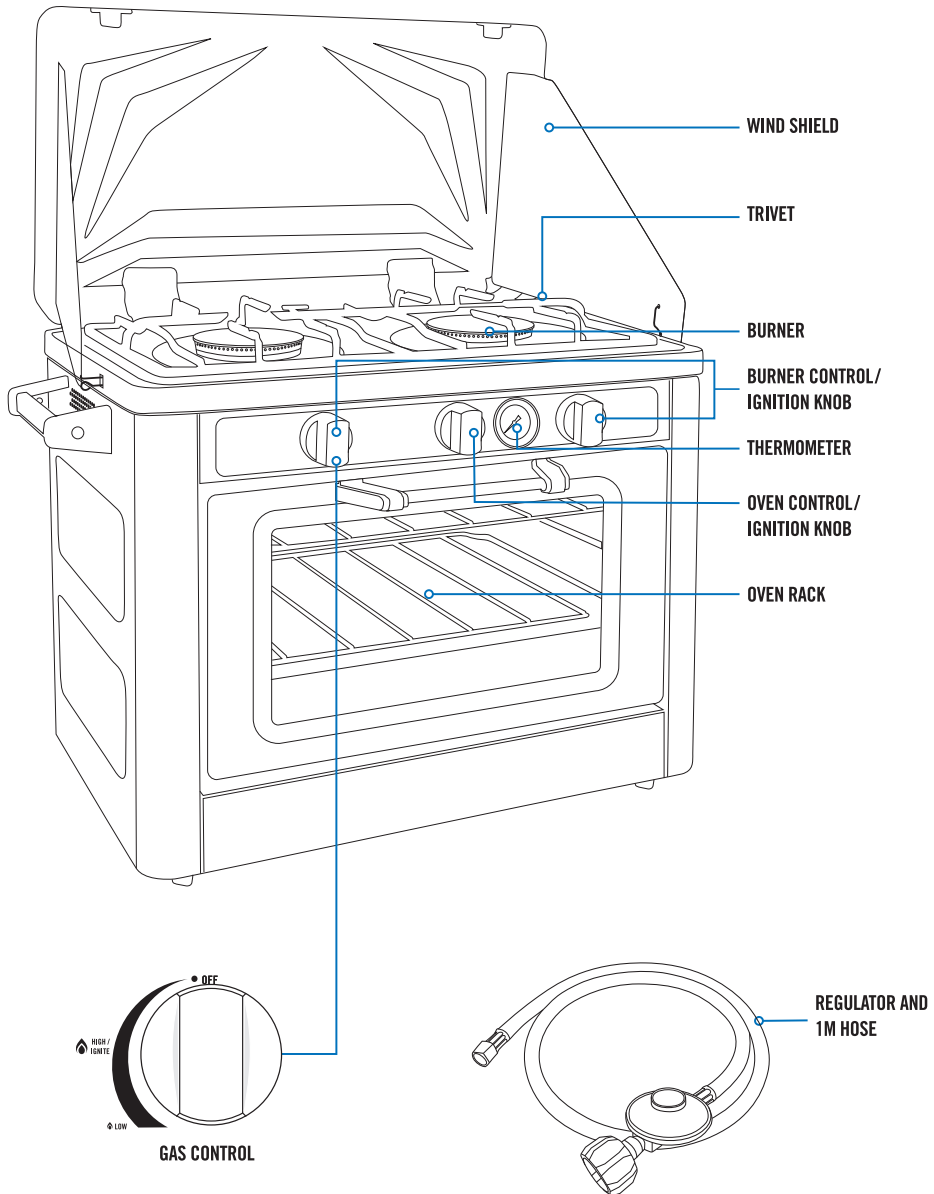

ASSEMBLY AND CONNECTION

Install door and side handles as shown.

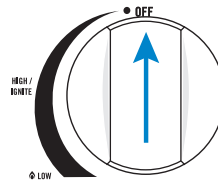 
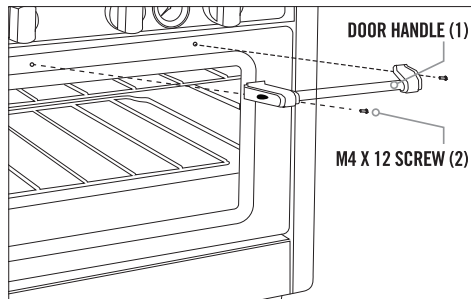 
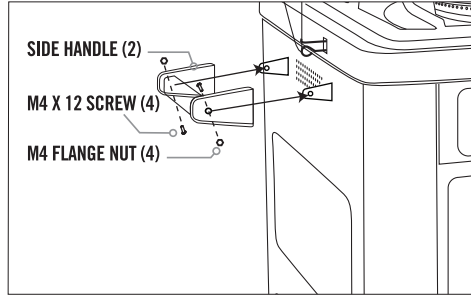 


Figure 2

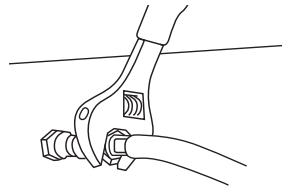 


Figure 3

Your appliance is designed to connect directly on to a gas cylinder using the specially designed LP Gas hose and regulator supplied with the appliance.

Check that the control knobs are in the “OFF” position (turned fully clockwise). See figure 2

Take the stove connector head of the hose and attach to the gas inlet on the appliance, tighten using a spanner. See figure 3

Attach the other end of the hose to the gas cylinder and tighten. See figure 4

Turn the cylinder gas valve on in an anti-clockwise direction for one full turn and then check the connections for leaks with Companion Gas Leak Detection Spray or soapy water. If a leak is detected turn the cylinder gas valve “OFF” and re-tighten all connections, then retest. See figure 5

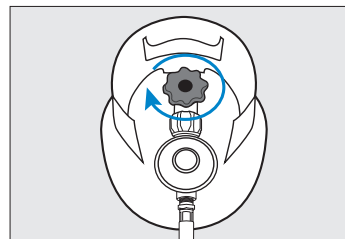 


Figure 4

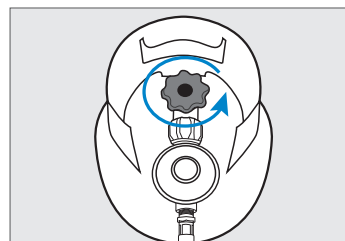 


Figure 5





CHECKING FOR GAS LEAKS

Check that all connections are tight and that the gas cylinder connection has been tightened before you turn the cylinder gas valve on.

If there is a leak on your appliance (smell of gas) immediately attempt to turn off the cylinder valve. Remove the appliance to a well-ventilated location away from any ignition source.

NEVER check for leaks with a flame or pilot light.

Check for leaks using Companion Gas Leak Detection Spray or soapy water, coat all connections, if bubbles appear turn the cylinder gas control off and re-tighten the connection before re-testing.

SAFE LOCATIONS

This appliance shall only be used in an above ground open air situation with natural ventilation, without stagnant areas, where gas leakage and products of combustion are rapidly dispersed by wind and natural convection.

Any enclosure in which the appliance is used shall comply with one of the following:

An enclosure with walls on all sides, but with no overhead cover (see example 1).

Within a partial enclosure that includes an overhead cover and no more than two walls (see examples 2 & 3)

 
Within a partial enclosure that includes an overhead cover and more than two walls, the following shall apply:

at least 25% of the total wall area is completely open.
30% or more in total of the remaining wall side, back and front wall areas is open and unrestricted (see examples 4 & 5).


In the case of balconies, 20% or more of the total wall area shall remain open and unrestricted.

DIAGRAMMATIC REPRESENTATION OF OUTDOOR AREAS


The following examples are diagrammatic representations of outdoor areas. Rectangular areas have been used in these examples – the same principles apply to any other shaped area.

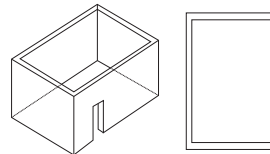

Example 1

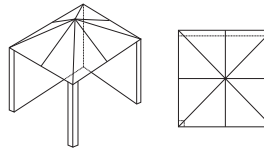 


Example 2

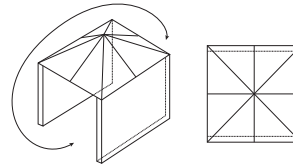 

Both ends open

 
Example 3

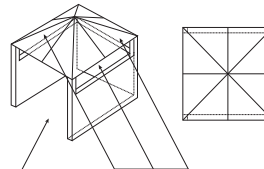

Example 4

Open side at least 25% of total wall area.

 30% or more in total of the remaining wall area is open and unrestricted.

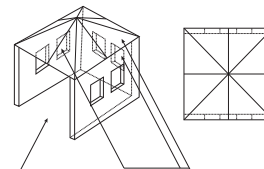

Example 5

Open side at least 25% of total wall area.

30% or more in total of the remaining wall area is open and unrestricted.





IMPORTANT INFORMATION FOR USE

- During operation all surfaces will be extremely hot and should not be touched or handled.
- During operation the door handle may become HOT. Ensure that you use an oven mitt when touching the handle.
- Handle with care even after brief use, always pick up using the handle not the cylinder.
- Take care that the primary air intakes, located on the burner tube of this appliance are not obstructed, or that air flow is restricted by placing items or other appliances close to or adjacent to the inlets.
- Do not attempt to move or relocate the appliance when it is operating, extinguish the burner and allow to cool, disengage the gas cylinder then move the appliance.
- This appliance is to be stored in a dry and well-ventilated location free from direct sunlight. Do not store when still connected to the cylinder.
- Make sure that the cylinder is disconnected and is stored in a well ventilated area, out of the reach of children, free from direct sunlight, heat and ignition sources. If being stored indoors, ensure that the location complies with the standard AS/NZS 1596.
- Never leave appliance unattended when operating.
- Do not use a multiple appliances to heat a single utensil.
- Only cooking vessels with a maximum diameter of 22cm are to be used with this appliance.
- Do not use as a space heater.
- Use as a cooking appliance only, is not to be used as heater or modify for any other reason.
- Avoid boil over and spills on to burners.
- After use, turn the gas cylinder valve off, wait for the flame to go out, then turn the appliance control valve(s) off.
- Avoid twisting or kinking the flexible hose.
- To check if gas remains in the cylinder, disconnect from the appliance and hold the cylinder in a vertical position then shake from side to side, if there is a sound or feel of liquid movement inside, the cylinder contains gas.

 





LIGHTING THE STOVE TOP

Make sure the control knob is set to the “OFF” position.

Step 1. Open the stove top lid and attach the windscreens to the side of the oven.

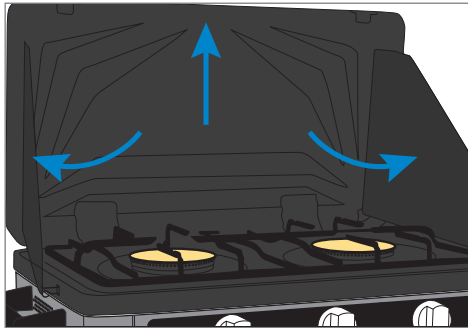

 Step 2. Depress and turn the control knob anti-clockwise until a “click” sound is heard, check that the burner is now alight if so hold the ignition knob in for 10 to 15 seconds then release.

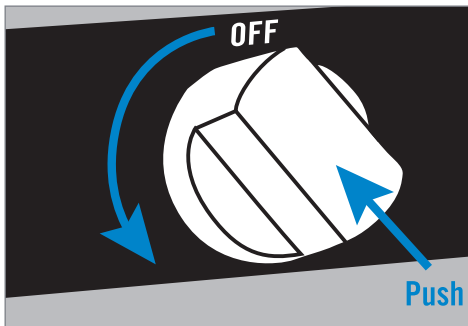


If burner is not alight, return the control knob back to the “OFF” position, allow the excess gas to disperse then repeat ignition process.


LIGHTING THE OVEN

Make sure the control knob is set to the “OFF” position.

 Step 1. Open oven door.

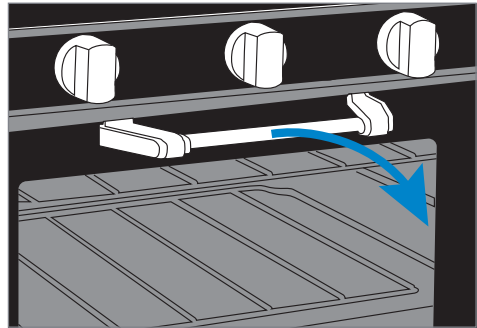

 Step 2. Depress and turn the control knob anti-clockwise until a “click” sound is heard, check that the burner is now alight.

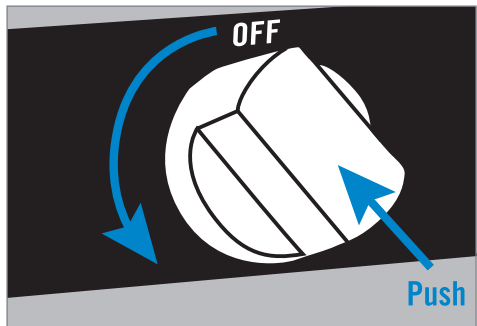


If burner is not alight, return the control knob back to the “OFF” position, allow the excess gas to disperse then repeat ignition process.





ADJUSTING THE FLAME / ADJUSTING THE OVEN TEMPERATURE

 Turn the gas control in a clockwise direction to achieve a higher flame and in an anti-clockwise direction for a lower flame. Turn the control fully clockwise to turn the appliance “OFF”.

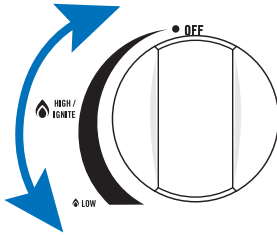

The oven temperature is displayed on the gauge located on the control panel.

Note: If oven temperature is above the desired cooking level, slightly open the door to remove excess heat.

TURNING THE APPLIANCE OFF

If the appliance is no longer to be used and to reduce the risk of blocked gas jets caused by excess gas being left in the hose, all remaining gas must be expelled from the hose assembly.

With the flame still operating, turn the valve on the gas cylinder in a clockwise direction until it is “OFF”. Allow the flame to burn down then extinguish once all remaining gas in the hose has been used. See figure 6.

Turn the control knob on the appliance to the “OFF” position. See figure 7.

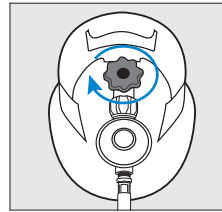 


Figure 6

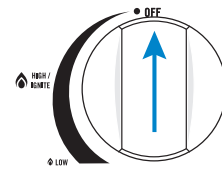 


Figure 7





CARE INSTRUCTIONS

Using warm soapy water with a mild detergent wipe down all surfaces and areas of the appliance, taking care not to allow water to enter the burner outlets or aeration holes located in the burner tube.

Do not submerge the appliance in a sink or bowl.

Do not use abrasive cleaners or bleach.

MAINTENANCE AND SERVICE

During operation if it is noted that the burner flame is unstable, is changing colour from blue to yellow or has a distinct smell it is important that you take the appliance to your local authorised gas appliance repairer for inspection.

Periodically check the gas control is tight and has no leaks, follow the testing for leaks procedure. Check the gas hose and regulator for any signs of wear, cuts or fraying, if identified replace immediately with a Gas Certified replacement hose and/ or regulator.

For further information or assistance please contact customer service.

A selection of spare parts and components are available for your appliance to ensure years of operation.

For more information in Australia call 1300 555 197 or email: service@companionbrands.com.au

For more information in New Zealand email: service@companionbrands.com.au

SPECIFICATIONS

Part no.	CS-01
Model no.	Portable gas oven & cooktop
Gas type	LPG / ULPG
Gas jet size	Burner: 0.675mm Oven: 0.575mm
Gas consumption	Stove Burner (each): 5.6Mj/hr / 111.1g/hr Oven Burner: 3.8Mj/hr / 75.4g/hr
BTU output (total)	14,200
Inlet pressure	2.75kPa
Dimensions	540L x 391W x 458H mm
Weight	17kg
Certificate number	AGA 7171 G



WARRANTY POLICY

LIMITED WARRANTY AGAINST DEFECTS

1. This Limited Warranty is provided by Adventure Operations Australia Pty Ltd ABN [43 622 679 887] trading as Companion in our capacity as supplier and manufacturer of the Products. Our contact details are:

Address: 71 Charles Ulm Place, Eagle Farm, 4009 QLD.

Phone number: 07 3193 1110

Email address: warranty@adventureoperations.com

OUR LIMITED WARRANTY

2. This Limited Warranty applies in addition to any other express warranty or warranties against defects we may supply from time to time for specific Products. If the individual packaging, accompanying product information or labelling of a Product specifies a different warranty period from the 12 month warranty period provided in this Limited Warranty, the packaging Warranty Period will apply instead but on the same terms as this Limited Warranty.

THE WARRANTY PERIOD FOR THIS PRODUCT IS: 1 YEAR

3. Moving forward, in this Limited Warranty, Warranty Period means:

- a) for all Companion Products, 12 months from the date of original purchase of the relevant Companion Product; or
- b) another time period set out in the individual packaging, product information, labelling, or accompanying a specific Companion Product.

4. Under this Limited Warranty, we warrant that products distributed by Adventure Operations Australia Pty Ltd and any of our subsidiaries (Products) will be free from defects in materials and workmanship under normal use (as described in the published product documentation accompanying or applicable to the relevant product) for the relevant Warranty Period (Limited Warranty).

5. If a defect in materials or workmanship becomes apparent under this Limited Warranty within the Warranty Period described above, subject to any additional rights you have under the Australian Consumer Law or any applicable local law, we agree to replace or refund covered Product parts that prove defective through normal use during the Warranty Period. We may alternatively agree to repair certain Products through our qualified agents, where such facilities are available. Without limiting any rights you have under the Consumer Law, the following conditions also apply to the Limited Warranty:

- a) in replacing a defective product under the Limited Warranty, we may, at our discretion, substitute the product with a product model of equivalent nature where the exact model of the defective product is unavailable;
- b) we may elect, at our discretion and as an alternative to repairing or replacing a defective part, to refund



the cost of the relevant product upon it being returned to us or one of our authorised resellers;

c) this Limited Warranty does not extend or apply to any claim you or any other person may have for damage for any loss (including without limitation consequential damages or loss of profit, freight/shipping or travel costs), or otherwise damage howsoever caused whether or not such loss or damage arises as a result of any defect in the product or from the failure or omission on our part to comply with any obligation at law relating to the defect;

d) this Limited Warranty does not apply to damage caused by your failure and damage caused by improper use and abuse, fair wear and tear, accidents, misuse (including failure to follow instructions regarding care and maintenance of the product), neglect, disassembly, alterations or external causes such as, but not limited to, water damage, exposure to sharp objects, exposure to excessive force, anomalies in the electrical current supplied to the product (if applicable), and extreme thermal or environmental conditions; and

e) this Limited Warranty does not extend to any Products acquired for the purposes of re-supply, or for use in a manufacturing, or repair processes.

REPAIR FACILITIES AND SPARE PARTS

6. Please note that we have very limited repair facilities for our Products. This means that subject to any limited repair facilities offered through authorised repair agents, we are not able to repair broken or damaged Products that are broken or damaged by you or are defective. For defective Products, this Limited Warranty and your rights under the Australian Consumer Law will apply and in most cases the remedy will be limited to a refund or replacement.

7. Companion carries spare parts for many, but not all, of our Products. A comprehensive catalogue of our spare parts can be found at: Camping Gear Spare Parts. This means that where a Product is broken or damaged by you, we may not be able to provide you with a spare part for that Product. Where a Product is defective, you will be entitled to your rights under this Limited Warranty and the Australian Consumer Law, and in most cases the remedy will be limited to a refund or replacement.

HOW TO CLAIM THE LIMITED WARRANTY

8. This Limited Warranty is only valid and enforceable in Australia or New Zealand and will apply only if you have purchased the Product from us directly or from one of our authorised resellers.

9. This Limited Warranty may be claimed by you if a defect becomes apparent in the Product within the Warranty Period.

10. To claim this Limited Warranty you must do either of the following:

a) return the defective product to its place of purchase within the Product's Warranty Period, with a detailed proof-of-purchase clearly showing the date and detail of the purchase;

b) make the warranty claim directly with us by returning the defective Product to our address at Adventure Operations, 71 Charles Ulm Place, Eagle Farm, 4009 QLD accompanied by a detailed proof-of-purchase clearly showing the date and detail of the purchase;



c) make the warranty claim directly with us by emailing us at warranty@adventureoperations.com accompanied by a detailed proof-of-purchase clearly showing the date and detail of the purchase. We may require you to mail us the product or email us photographs of the defect and Product.

11. Where you return the defective Product in-store to the place of purchase, our authorised reseller will inspect the Product and proof-of-purchase to determine if this Limited Warranty has been complied with and can be claimed. They will also determine the remedy available to you under this Limited Warranty.

12. Where you make the warranty claim directly with us, we will inspect the Product (including by inspecting photographs you send to us over email) and the proof-of-purchase to determine if this Limited Warranty has been complied with and can be claimed. We will also determine the remedy available to you under this Limited Warranty.

EXPENSES

13. You must bear the expense of claiming a remedy under this Limited Warranty, including postage and transport costs of returning the product. If we or our authorised reseller determine you are entitled to a remedy under this Limited Warranty, we will reimburse you for any reasonable expenses you have incurred in making the claim, provided you supply us with proof of such expenses.

YOUR RIGHTS UNDER THE CONSUMER LAW

14. Products distributed by Adventure Operations Australia Pty Ltd and any of our subsidiaries come with guarantees that cannot be excluded under the Australian Consumer Law or the New Zealand Consumer Guarantees Act 1993 (Consumer Law) (as the case may be). You are entitled to a replacement or refund for a major failure (or, where the New Zealand Consumer Guarantees Act 1993 applies, a failure of a 'substantial character') and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if products fail to be of acceptable quality and the failure does not amount to a major failure (or a failure of a substantial character, as the case may be).

CONTACT US

15. If you have any questions concerning this warranty policy, you may contact us in writing:
Adventure Operations, 71 Charles Ulm Place, Eagle Farm, 4009 QLD
or by email: warranty@adventureoperations.com
or visit our website: adventureoperations.com





WARRANTY - For details see www.companionoutdoor.com/warranty

Companion® is a registered trademark of
Adventure Trading Australia Pty Ltd

Designed by:
Adventure Trading Australia Pty Ltd
71 Charles Ulm Place,
Eagle Farm, QLD 4009
AUSTRALIA



Made in China

