

# TENT OWNERS MANUAL

## LUMOS FAST FRAME 12 PERSON

### BEFORE YOU BEGIN

- This tent requires a minimum of two people to set up
- Read all the instructions before setting up your tent. Check parts list to ensure you have full contents
- Find a Flat area for your tent, free from rocks, potholes and branches
- Ensure that you use all pegs, ropes and additional poles only as instructed
- If conditions are windy, arrange tent as to have narrowest side of tent facing into the wind
- Keep away from Open Flames, DO NOT USE Stoves or Burning Appliances inside the tent

### WARNING

#### AVOID CONTACT WITH OPEN FLAMES:

This tent is manufactured to meet CPAI-84 Fire Retardant standards. The fabric may burn if in continuous contact with open flame sources.

#### CONDENSATION IS NOT LEAKING:

Minimise condensation by ensuring your tent is well ventilated through windows, doors or vents.



### CONTENTS

- Inner Tent x 1
- Rain fly x 1
- DuraPlus Vestibule Pole x 1
- Steel Portico Pole: x 2
- Awning poles x 10
- Pegs x 57
- Guy Ropes x 10
- 4 D-Cell Battery Box x 1 (Batteries not Included)

DuraPlus Vestibule Pole x 1:



Steel Awning Pole x 10:




Steel Portico Pole x 2:




### STORAGE

- To maximise the life of your tent, always ensure it is clean of dirt and debris.
- Never store if wet or damp. Consider airing your tent at home after your trip and allow to completely dry before storing between trips
- Continued exposure to sunlight can degrade the polyesters used to make tents. Always store your tent in its storage bag, away from direct light in a cool, dry space
- Remove D-Cell batteries from battery box prior to storing


### Operating the Lumos LED Lighting System:

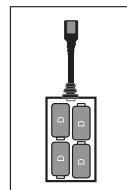


Add 4-D batteries to empty battery pack. (Batteries not included)

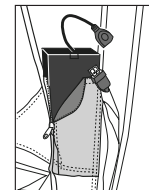

Slide battery pack into pocket located inside the tent.

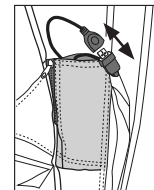

Zip up pouch, then plug in battery pack cord into lighting connector.



Press buttons on switch box located on either inside or outside of tent to turn on lighting.


Alternatively: Lumos System can run from a rechargeable battery pack, Not Exceeding 5V, 1A output

Note: Nightlight mode may not operate if your rechargeable power pack incorporates an 'auto-off' function due to its low draw. For optimal operation we always recommend using D cell Alkaline Batteries.

# TENT OWNERS MANUAL


## LUMOS FAST FRAME 12 PERSON

### STEP 1: LAYOUT THE INNER TENT

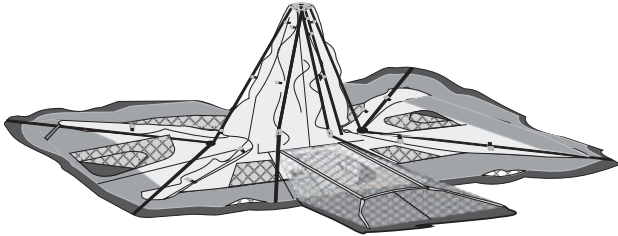

- Unfold the inner tent and outstretch over a flat, clear area
- Arrange the door so it is facing your desired area for entry & exit
- Fold leg poles away from the center of the tent, so the roof framing stands up

### STEP 2: RAISE THE ROOF

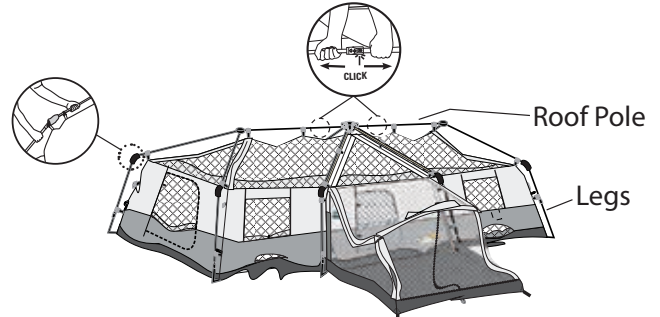


- Locate roof poles and lift upwards from base, to the horizontal position.
- The leg poles will angle at joints and partially stand up
- **BEFORE** raising the legs: Lengthen the roof poles by extending Horizontally until they Click into Place

### STEP 3: ERECT THE TENT




- Extend the vertical frame legs until they click into position
- Repeat on the legs in the center and other corners of the tent
- Install Front Vestibule Pole by placing through sleeve located above the door on Front of the screen room front
- Insert Vestibule pole into black plastic molding
- Insert Steel Portico Pole into opposite side of black molding
- Connect base of Portico Pole to ring and pin on Grey Webbing stitched to Inner tent corner

### STEP 4: SECURE FLY TO INNER TENT

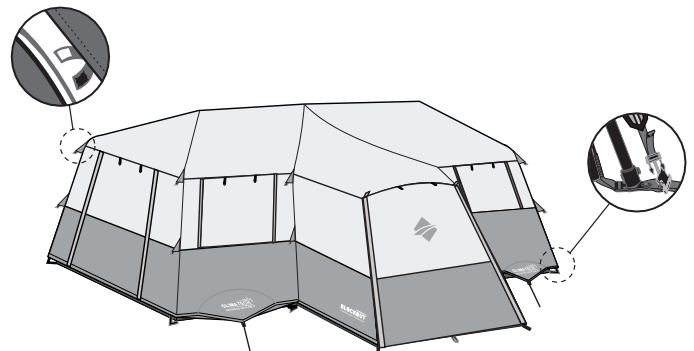


- Secure rain fly to tent with Velcro tabs located on underside of rain fly
- Connect the fly to the tent using red and grey buckles on tent corners

### STEP 5: ASSEMBLE THE AWNINGS

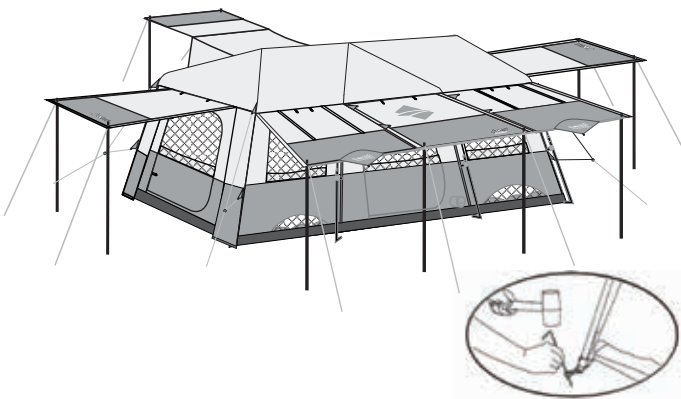

- Use the awning poles and additional ropes to suspending the door panel overhead
- Peg out the tent and fly around the perimeter

### STEP 6: ALWAYS PEG OUT AND USE GUY ROPES

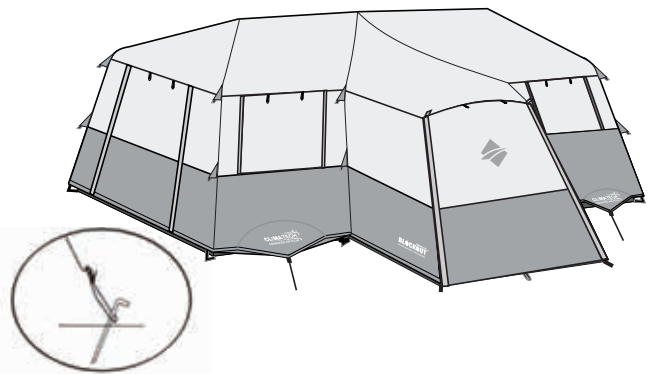

- In windy and rainy conditions, awnings must be dismantled, and doors must be closed, and guy ropes must be set out

**PACK UP: REMEMBER TO REMOVE BATTERY BOX PRIOR TO PACKING**  
**TO TAKE DOWN THE TENT, REVERSE PREVIOUS STEPS**  
**REMEMBER TO COMPLETELY LOWER LEGS BEFORE COLLAPSING HORIZONTAL ROOF POLES**