OWNERS MANUAL

ODYSSEY 10 PERSON TENT

10001528

BEFORE YOU BEGIN


- This tent requires a minimum of two people to set up
- Read all the instructions before setting up your tent
- Check parts list to ensure you have full contents
- Find a flat area for your tent, free from rocks, potholes and branches
- Ensure that you use all pegs, ropes and additional poles only as instructed
- If conditions are windy, arrange tent to have narrowest side of tent facing into the wind
- Keep away from open flames, DO NOT USE stoves or burning appliances inside the tent

STORAGE


- To maximise the life of your tent, always ensure it is clean of dirt and debris
- Never store if wet or damp. Consider airing your tent at home after your trip and allow to completely dry before storing between trips
- Continued exposure to sunlight can degrade the polyesters used to make tents. Always store your tent in its storage bag, away from direct light in a cool, dry space
- Remove D-Cell batteries from battery box prior to storing




LIGHTING SYSTEM

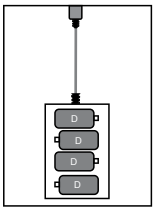


Add 4 D-cell batteries to battery pack (batteries not included)

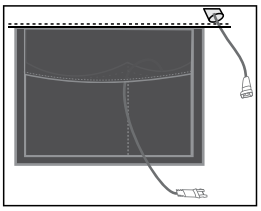

Put battery pack inside storage pocket

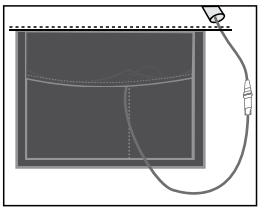

Plug battery pack into lighting connector

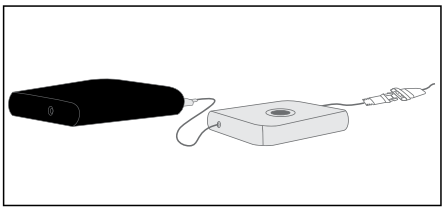

Press button for on / off
Hold down to adjust brightness

NOTE: Light can be run off an alternative 5V power source such as a power bank, plug directly into lighting connector to power

CONTENTS

- Inner tent x 1
- Rain fly x 1
- Awning poles x 6
- Pegs x 48
- Guy ropes x 6
- Carry bags x 3
- 4 D-Cell battery box x 1 (Batteries not Included)

Steel awning pole x 6:

OZtrail® is a registered trademark of **Adventure Trading Australia Pty Ltd**

Designed by:
Adventure Trading Australia Pty Ltd
71 Charles Ulm Place,
Eagle Farm, QLD 4009
AUSTRALIA

AN ADVENTURE OPERATIONS BRAND

SEE OTHER SIDE FOR PITCHING INSTRUCTIONS


Made in Bangladesh

OWNERS MANUAL

ODYSSEY 10 PERSON TENT


10001528

STEP 1: LAYOUT THE INNER TENT

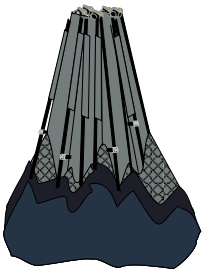


- Unfold the inner tent and outstretch over a flat, clear area
- Arrange the door so it is facing your desired area for entry & exit
- Fold leg poles away from the center of the tent, so the roof framing stands up, and peg down each four corners

STEP 2: ERECT INNER TENT

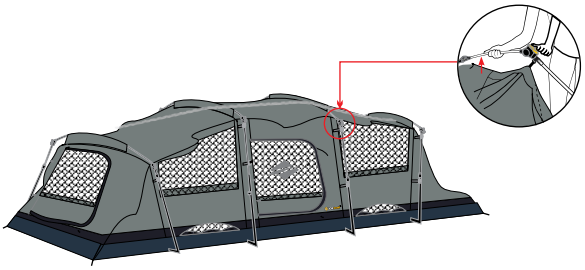

- Starting in the middle of the tent, lift roof frame up then gently push the mechanism inwards until the button clicks into place, repeat this on the other middle frame and then the end poles
- The leg poles will angle at joins and partially stand up

STEP 3: ERECT INNER TENT AND PUT ON RAIN FLY

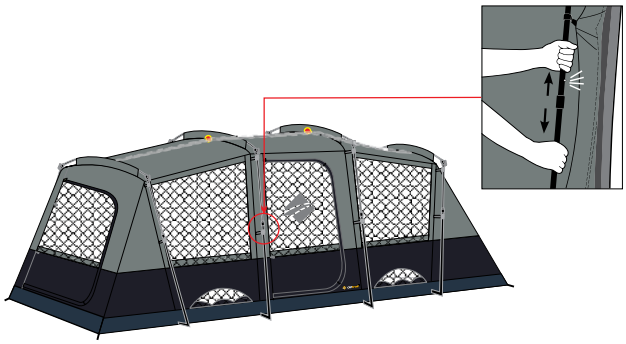


- Extend the vertical frame legs until they click into position
- Place rain fly over the inner tent so red webbing on the rain fly faces the rear of the tent

STEP 4: SECURE RAIN FLY TO INNER TENT



- Secure rain fly to tent with hook and loop tabs located on underside of rain fly
- Secure the rain fly to the ground with the multiple peg points

STEP 5: SECURE TENT TO GROUND

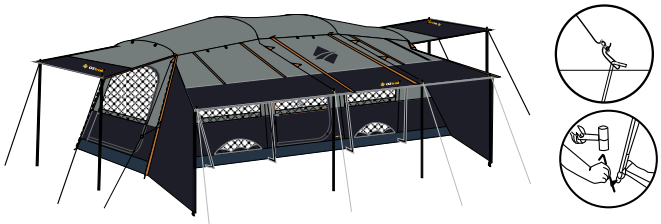

- Pull tent out tight from one corner, peg into the ground then repeat on other corners
- Peg out the tent with all guy ropes around the perimeter
- Assemble awning using door panel, awning poles, ropes and pegs

CHANGING WEATHER CONDITIONS



- In light winds and rainy conditions, awnings must be dismantled, and doors must be closed, and guy ropes must be checked to ensure they're tight
- If weather conditions get worse, the tent needs to be packed away to avoid any damage or injury

PACK UP: REMEMBER TO REMOVE BATTERY BOX PRIOR TO PACKING

TO TAKE DOWN THE TENT, REVERSE PREVIOUS STEPS

REMEMBER TO COMPLETELY LOWER LEGS BEFORE COLLAPSING HORIZONTAL ROOF POLES

SPARE PARTS AND ASSISTANCE - For more details see www.oztrail.com.au

WARRANTY - For details see www.oztrail.com.au/warranty