

ROMAN PALM MAT 2.2

REPAIR INSTRUCTIONS

Repairing Small Punctures

1. Locate small, pinhole punctures by inflating the mat as firmly as possible by mouth.
2. Immerse the mat in water to identify small escaping bubbles. Mark the location of the hole.
3. Completely dry the mat, and deflate.
4. Add a small amount of adhesive to the puncture.
5. Allow to dry for 30 minutes before using the mat.

Repairing Larger Punctures

1. Thoroughly clean the puncture site.
2. Apply adhesive to the puncture (Fig 1).
3. With a circular motion, spread the adhesive outwards away from the puncture.
4. Trim the patch 3cm beyond the damaged area. Ensure the corners are rounded and lightly coat with adhesive (Fig 2).
5. Wait approximately 3 minutes until the glue is touch dry. Centre the patch over the damaged area and press gently smoothing the area of bubbles or wrinkles (Fig 3).
6. Allow the patch to cure for 10 minutes or longer before inflating.

Cold Conditions

If the glue becomes stiff due to cold weather, warm the tube with body heat for 5-10 minutes. After repairing the mat, allow 30 minutes or more for the glue to cure.

DANGER! EXTREMELY FLAMMABLE!

Do not use near heat, sparks and open flames. Contains petroleum distillate. Use only in well ventilated areas. Avoid prolonged breathing of vapour. Avoid eye contact. Avoid prolonged or repeated contact with skin.

Suggested first aid: for eye contact, immediately flush with plenty of water for at least 10 minutes and call a doctor.

If swallowed, do not induce vomiting; call a doctor immediately. Keep container closed when not in use.

KEEP OUT OF REACH OF CHILDREN!

Roman® is a registered trademark of
Adventure Trading Australia Pty Ltd

Designed by:
Adventure Trading Australia Pty Ltd
71 Charles Ulm Place, Eagle Farm, QLD 4009
AUSTRALIA
Made in China

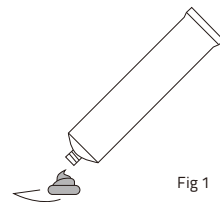


Fig 1

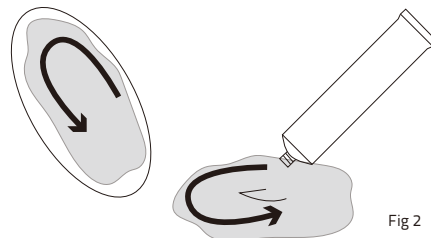


Fig 2

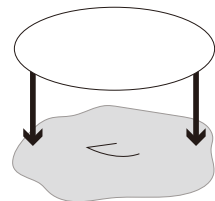


Fig 3